
Part Names - Main Unit English Guide

- The number shown in each ▶ is the page number where the part's function and/or use are explained in Japanese.


Front view

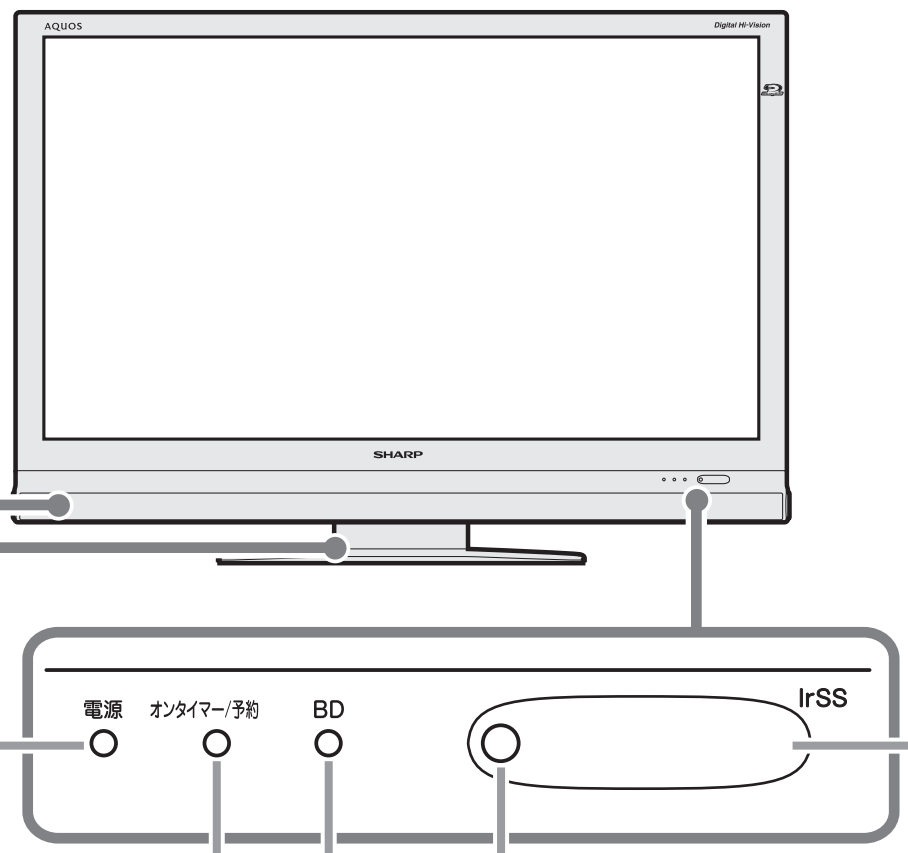

Adjusting the LCD panel angle
- The LCD panel can be rotated horizontally up to 20° clockwise and counter-clockwise.
- Hold the stand firmly when you adjust the monitor's angle.

Right side view

Control panel

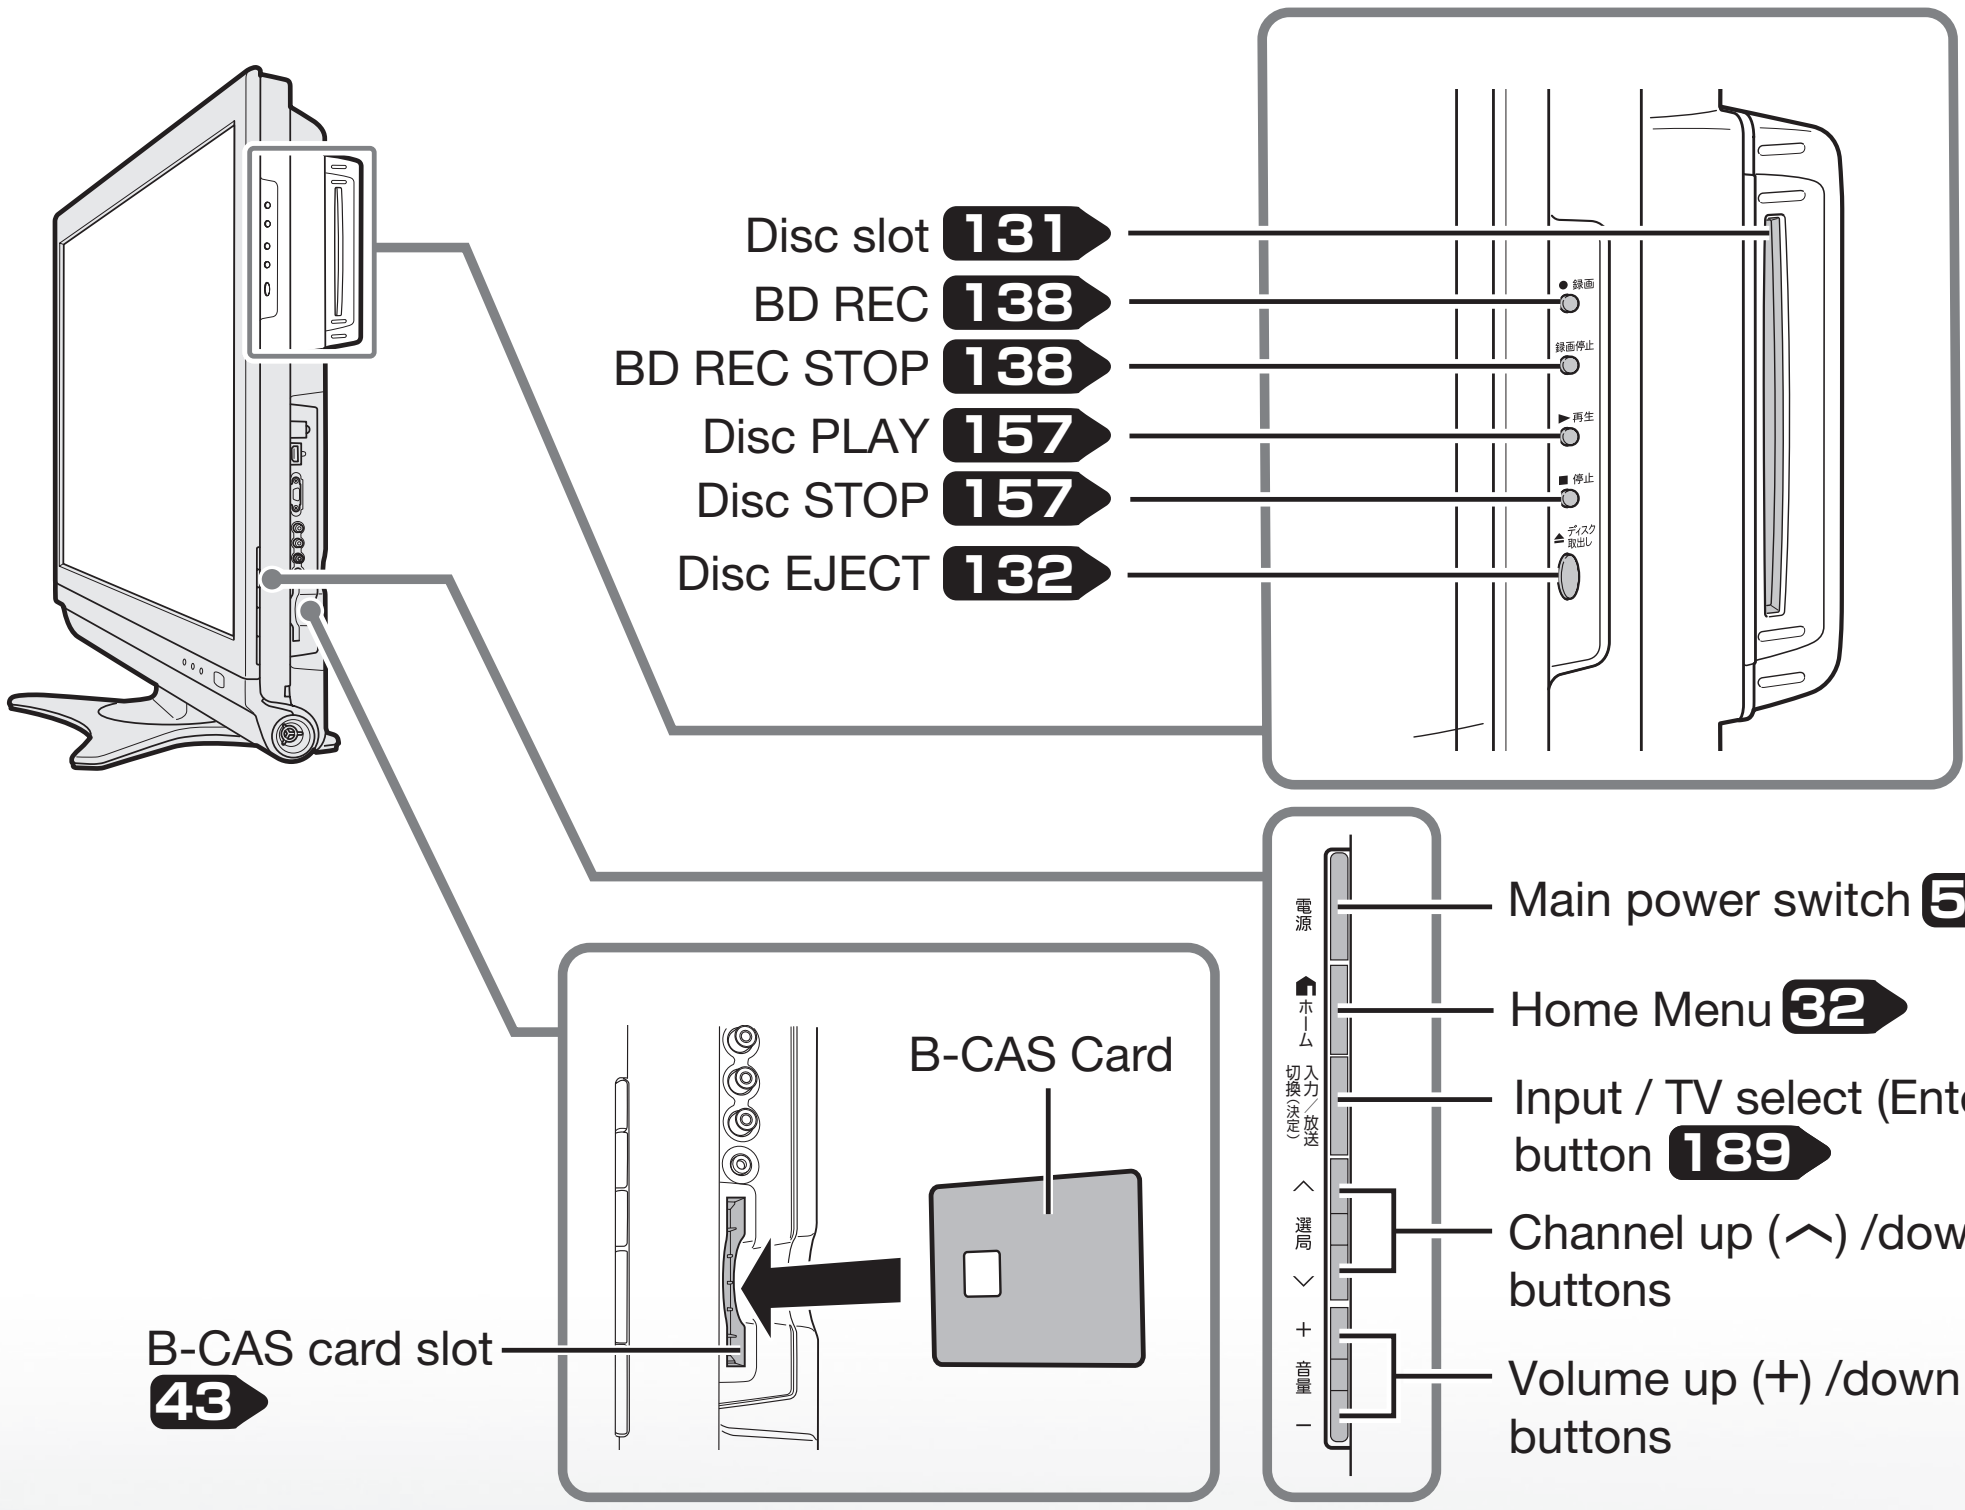

Back view

Connect the telephone line

Telephone line jack 231・241

Connect a Blu-ray Disc player, AV amplifier, etc.

AV in 1 and 2 (HDMI) 50・186・187 193・198・206


AV in 4 (D5) 50・186・193

AV in 6 186・193

RS-232C 223

AV in 7 (PC) 199

PC input (audio) 198・199・204

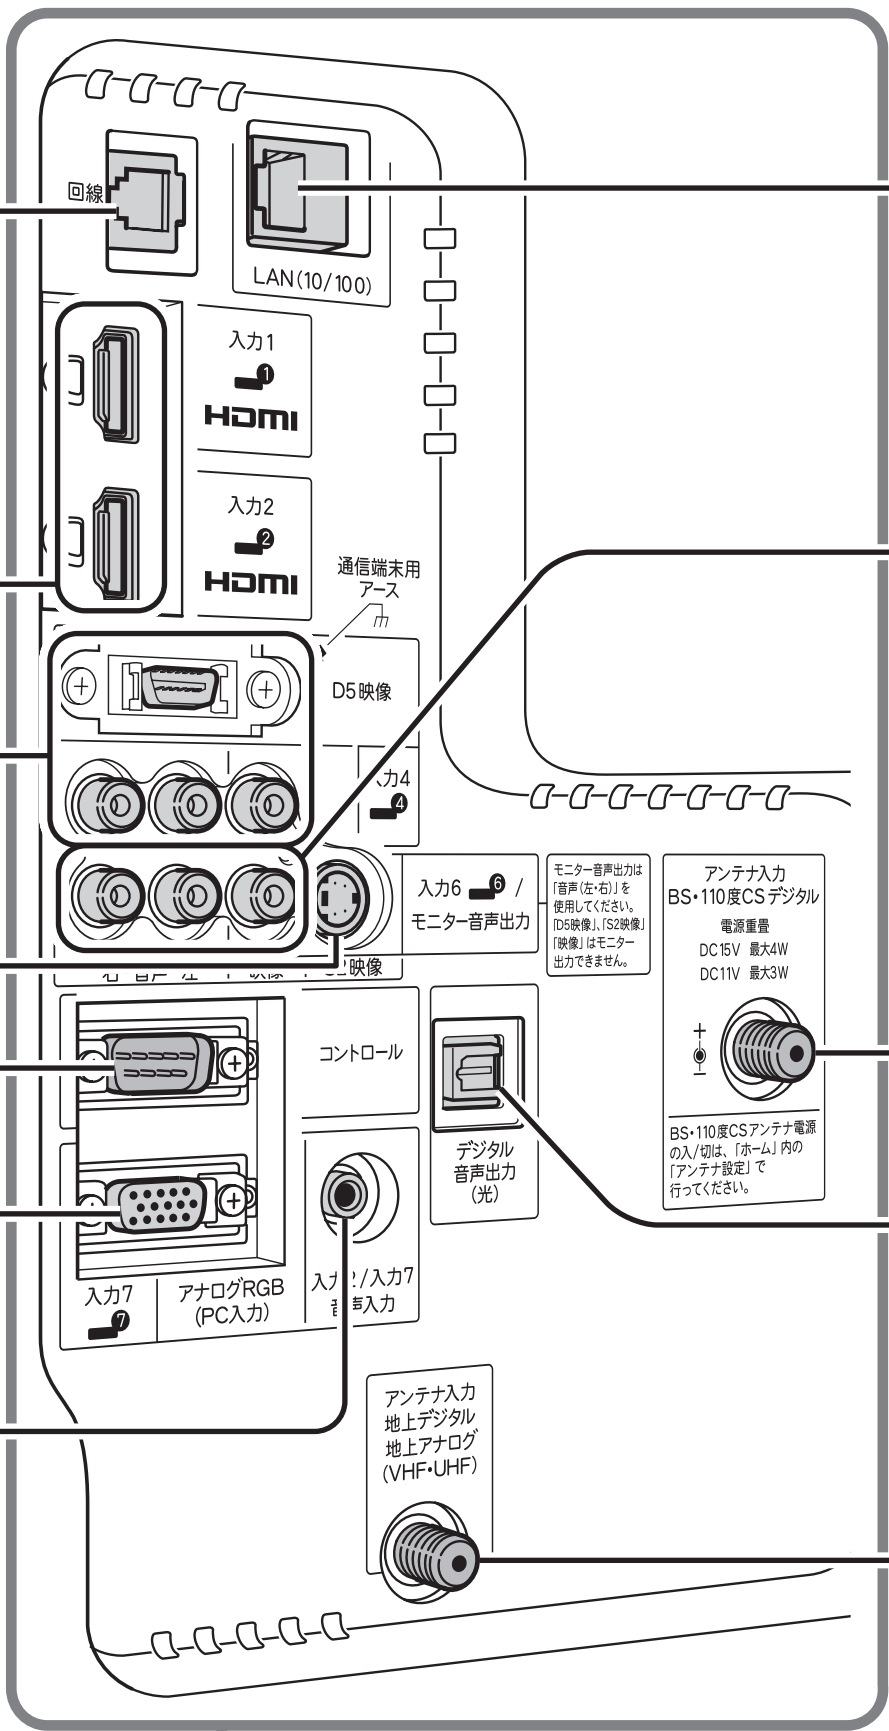

LAN jack (10BASE-T/100BASE-TX) 241


Connect a recorder

AV in 6 /Monitor out (REC OUT) 186・193・196

BS·CS 110 antenna input terminal 47~49


Digital audio output jack (optical) 195

VHF·UHF antenna input terminal 46~49

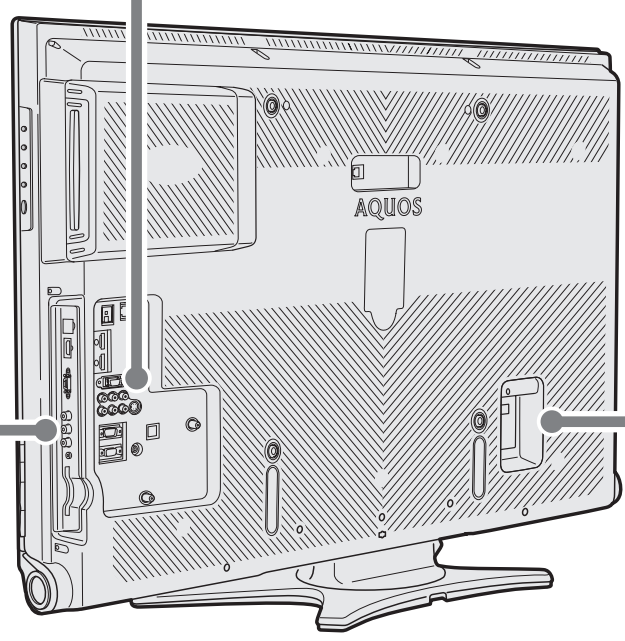


Connect the AC cord

AC cord connector (AC 100V) 43

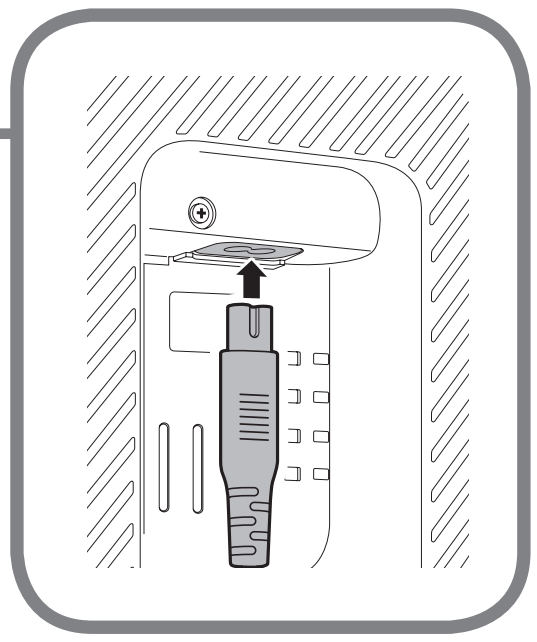

The provided power connector may have different shape from that shown in the drawing.

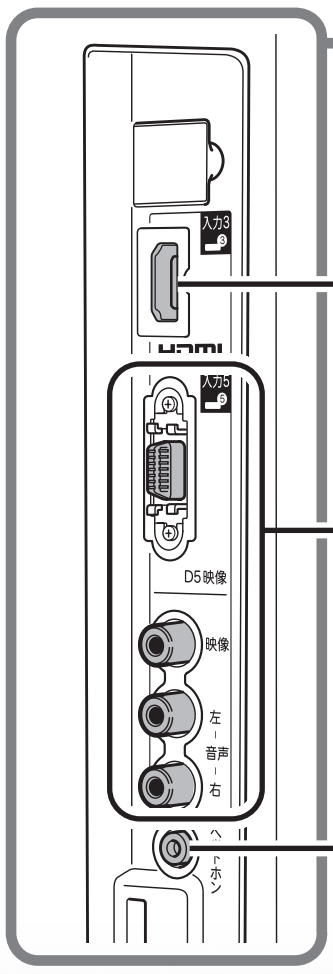

AV in 3 (HDMI) 50・186・187・193・198・206

AV in 5 (D5) 186・193


Connect a video game equipment, video camera, etc.

Headphones jack

Part Names - Remote Control Unit

- A remote control unit that mainly operates the TV, as well as the one that can be used for both the TV and the BD recorder, is supplied with this product.
- Explanations in this operation manual are carried out for the remote control unit that can operate both the TV and the BD recorder as an example. Buttons of the same name for each remote control unit have the same functions.

See Page **85** for how to select a program.

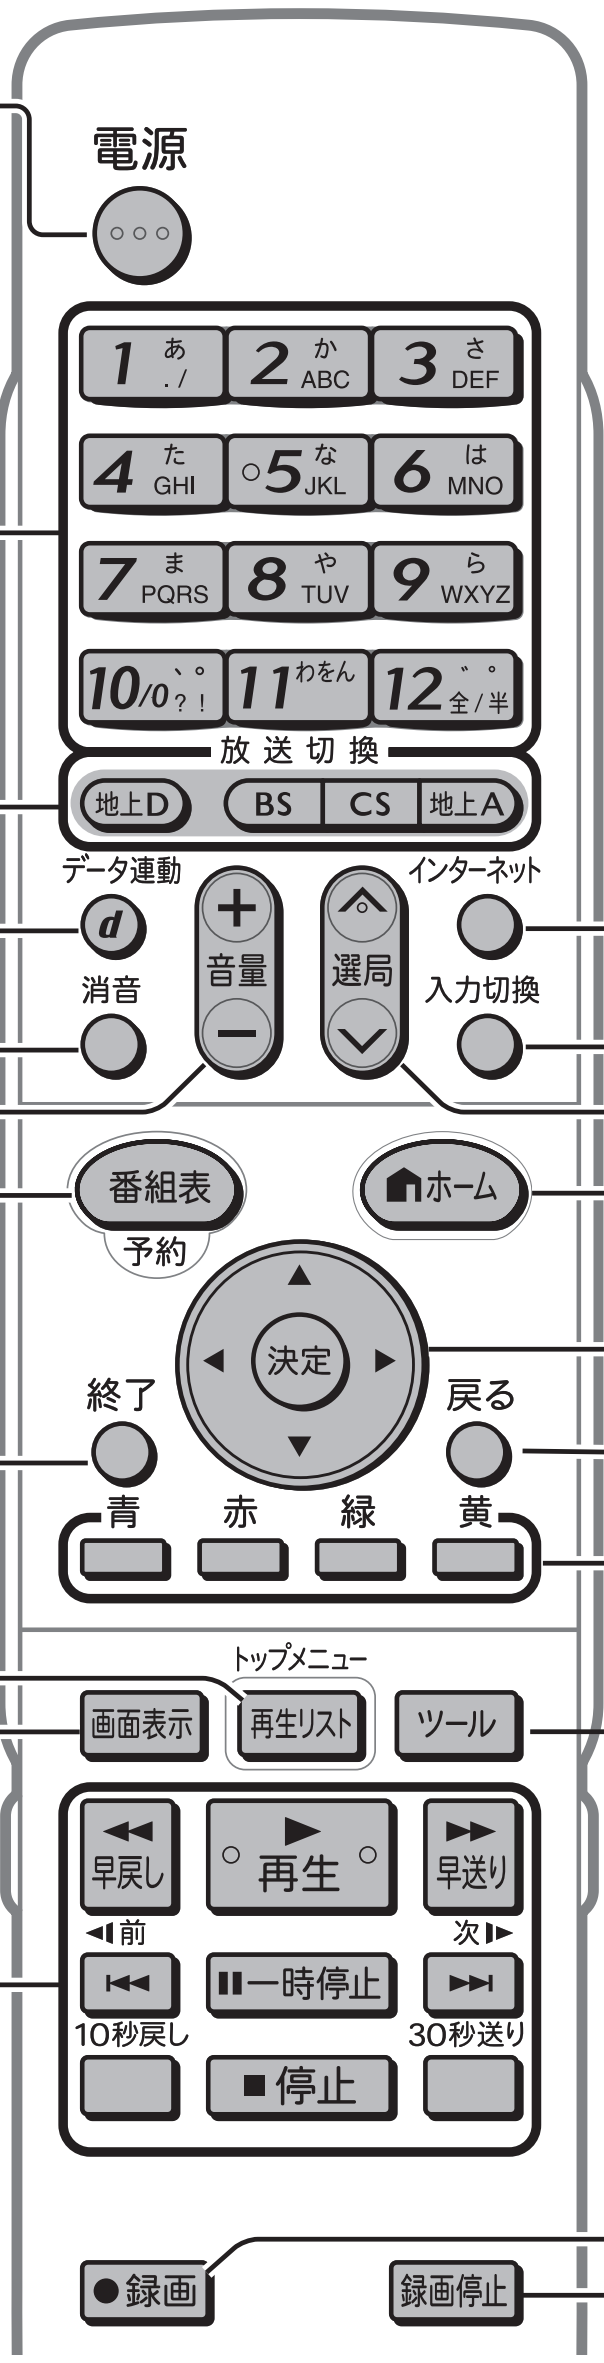

Active/Standby 55
Press to engage the TV set in the active or standby mode.

Channel select 86
- Press to select a channel.
- Use to input a number for various settings.

Terrestrial analog/Terrestrial Digital/BS/CS 85
Select the CS digital channel for the first time. 60

Linked data broadcast 90•105•169

Mute 86
Press to temporarily turn off the sound. Press again to return the sound volume to the previous level.

Volume up (+)/down (–) 86
Press to adjust the volume.

EPG 92•94•140•211
Press to display or turn off the Electronic Program Guide (EPG: 番組表) when receiving a digital broadcast.
Select a future program in EPG to set a timer program.

Finish 32
Press to finish menu operation, etc.
* This button can be conveniently used when you are at a loss during menu or EPG operation, etc.

List the programs recorded on a BD 157
Display the Top Menu of the disc 161

Display 87
Press to display or turn off the channel call, etc.

Play back programs recorded on a disc 156
Fast forward, rewind, etc. during playback 166～168

View the Internet or IPTV 247 • 267

Input select 189

Channel up (∧)/down (∨) 86
Press to select channels in the current network, media and CATV channels in the ascending or descending order.
* CATV channels are factory set to be skipped.

Display the "Home" Menu 32
Press to start some useful operations of the TV.

Cursor (up, down, left, right) 32
Enter/Confirm 32


Return 32

Color 94～95 • 105
Use to operate EPGs and data program screens.

Display the Tool Menu 30

REC 138
REC STOP 138

Buttons under the cover
Hold the cover by the projections ( ) and lift.

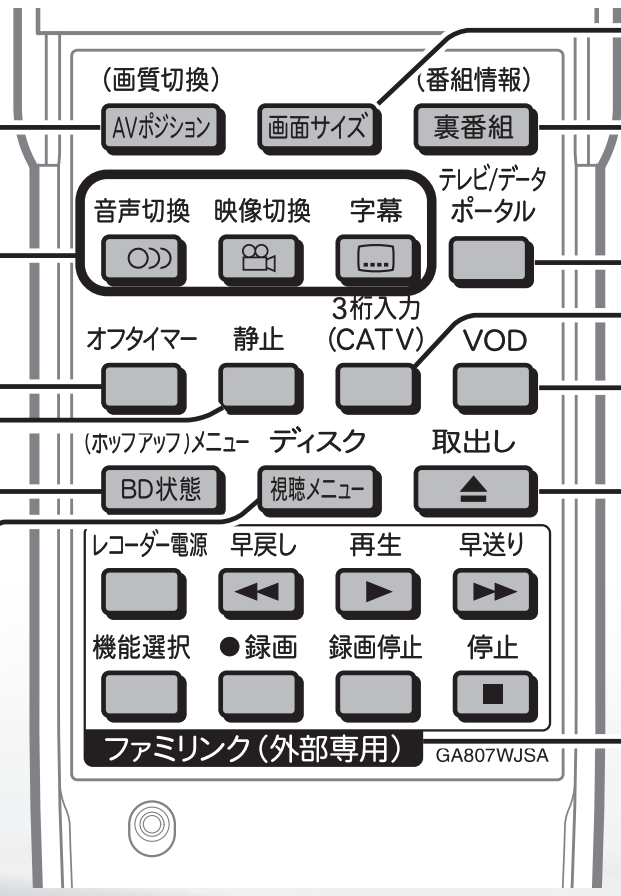

AV mode select 112

Audio select 102•103•169
Picture select 103•170
Caption 103•170

Sleep timer 221

Freeze 104

View status of the BD 148
Display the Pop-up Menu (BD) or Disc Menu (DVD) 161
Display the Playback Menu 171

Screen mode 109•200

Other on-air programs 93

Media select 85

CATV 88
Digital channel number input 89

Display the operation panel of VOD 275•279

Eject the disc 132

Familink 210～216
Press to operate "Familink" Recorders and AQUOS Audio connected via HDMI cables.

Switching the Display Language to English
ホームメニューなどの言語を英語にする

● Using the Home menu screen, you can switch the on-screen display language to English.
ホームメニューなどの画面表示を英語にすることができます。



おしらせ


誤ってホームメニューを英語にしてしまったときは

- ホームメニューから「Setup」－「(Change Function)」－「Menu Design」－「言語(Language)」を選んで決定し、「日本語」を選んで決定すると日本語になります。

1

Press ホーム and select with


Select “設定” (Setup) on the Home menu.
ホームメニューから「設定」を選ぶ

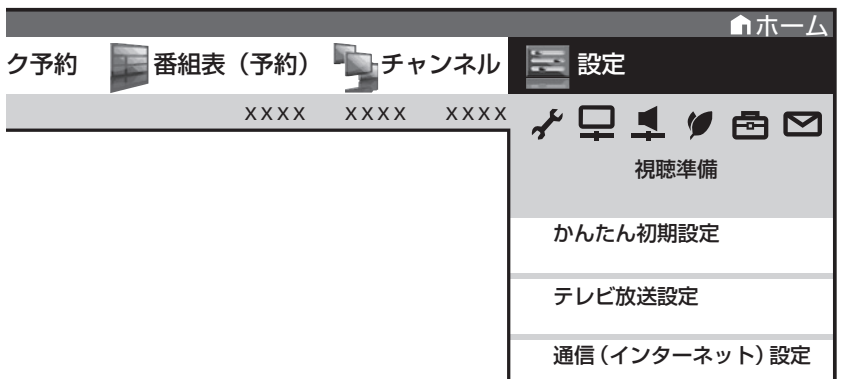

2

Select with


Select “(機能切換)” (Change Function).
(機能切換）を選ぶ

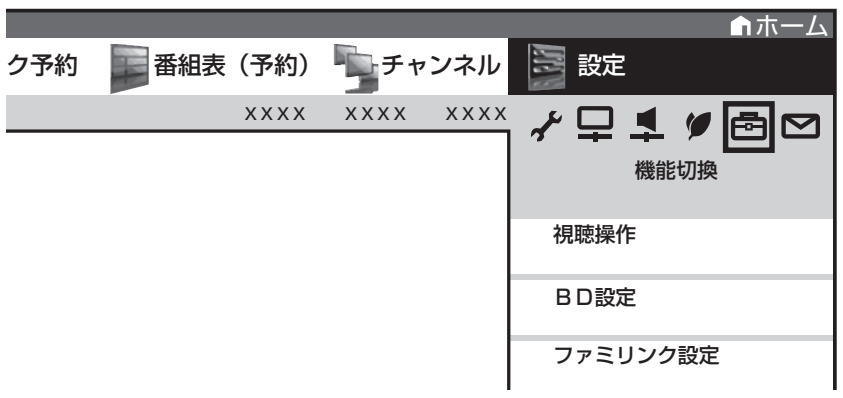

3

Select with
Press 決定

Select “画面表示設定” (Menu Design).
「画面表示設定」を選ぶ

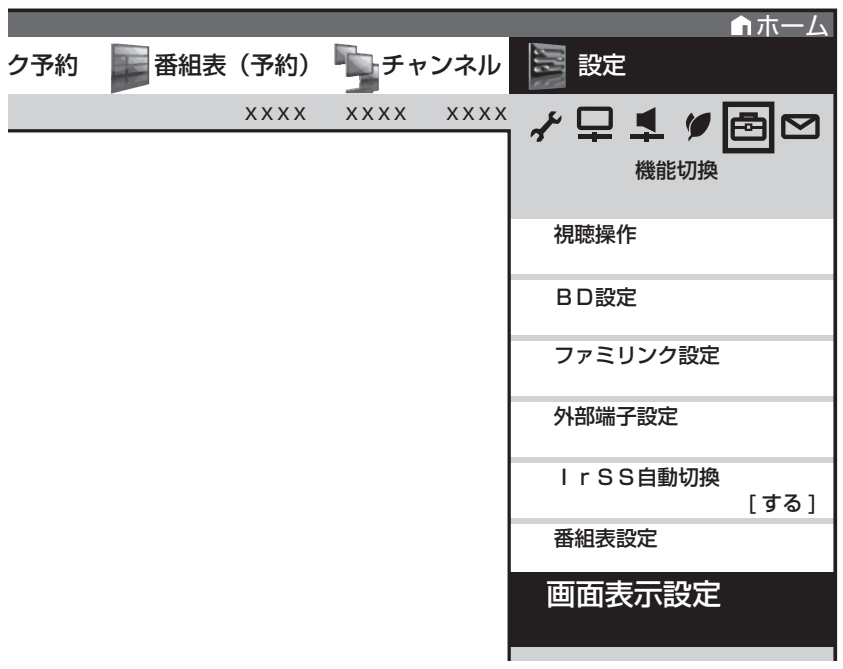

4

Select with
Press 決定


Select “Language（言語）”.
「Language（言語）」を選ぶ



5

Select with
Press 決定

Select “English”.
「English」を選ぶ
Enter.
決定する

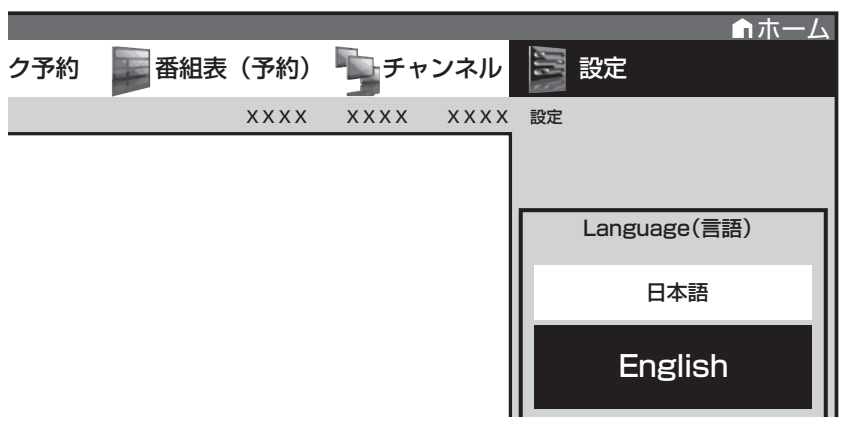

- The menu screen is now displayed in English.
- 画面表示が英語になります。

6

Press 終了

Finish this operation.
終了する